



"The Future in Automotive Lighting"

INSTALLATION GUIDE

HYLUX Quick Start HID System

HID Kit Pros
60 NW Gilman Blvd.
Issaquah, WA 98027

sales@hidkitpros.com

www.hidkitpros.com


KIT COMPONENTS

2x HID BULBS




2x HID BALLASTS

35W (A2088)

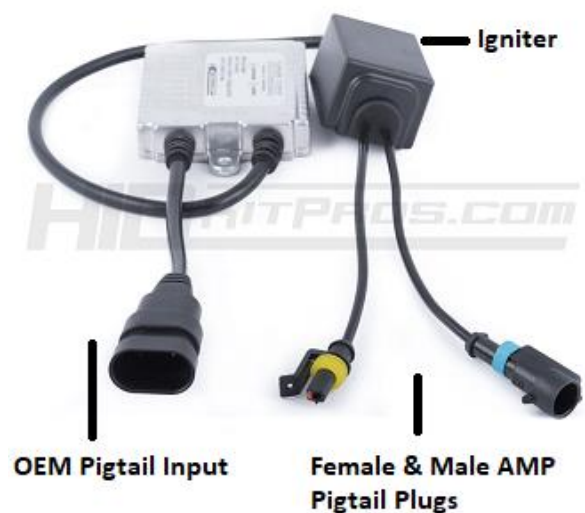

50W (A0050)

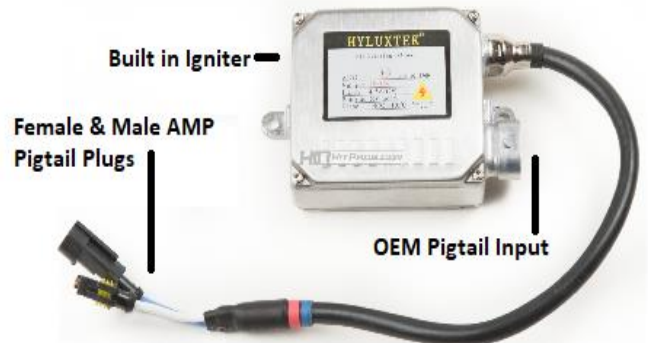

DETERMINE INSTALLATION TYPE

- 1. Bulb is Inside Headlamp Assembly (Behind Cap/Cover)**
- 2. Bulb is Outside Headlamp Assembly (No Cap/Cover)**



**1. BULB IS INTERNAL —
BEHIND DUST CAP/ COVER**



**2. BULB IS EXTERNAL —
NO CAP/COVER**

If your application has an internal bulb, a small hole will be required in the back of the headlamp cap to all wires to be properly routed and weather seal grommet pre-installed on the bulbs to be installed.

GROMMET INSTALLATION


NOTE: STEPS 1 & 2 IS FOR APPLICATIONS WITH INTERNAL BULBS/USING A HEADLAMP COVER/CAP.

1. USING A 7/8" – 1" DRILL BIT OR DREMEL, CAREFULLY CUT/DRILL A 7/8" TO 1" HOLE (AS SEEN IN EXAMPLE #1) FOR THE RUBBER GROMMET TO SEAT FIRMLY INTO, KEEPING MOISTURE AND DEBRIS OUT.

2. INSTALL BULB IN HOUSING WITH WIRES OUTSIDE OF CAP AS SHOWN IN EXAMPLE #2.




3. CONNECT INTERNAL POWER WIRES (OEM INPUT) TO VEHICLE AND SECURE BULB IN TO PLACE.

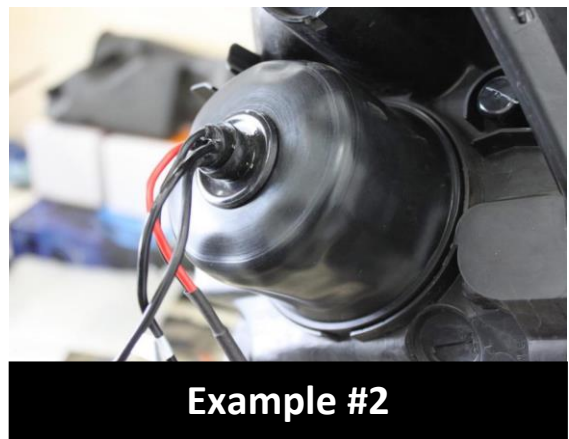

BALLAST INSTALLATION

- 1. INSTALL OEM/STOCK VEHICLE PLUG IN TO THE OEM INPUT PLUG ON THE BALLAST.**
- 2. CONNECT BOTH MALE AND FEMALE AMP CONNECTIONS FROM THE HID BULB TO THE BALLAST.**
- 3. MOUNT BALLASTS TO A STURDY/SECURE PLACE.**

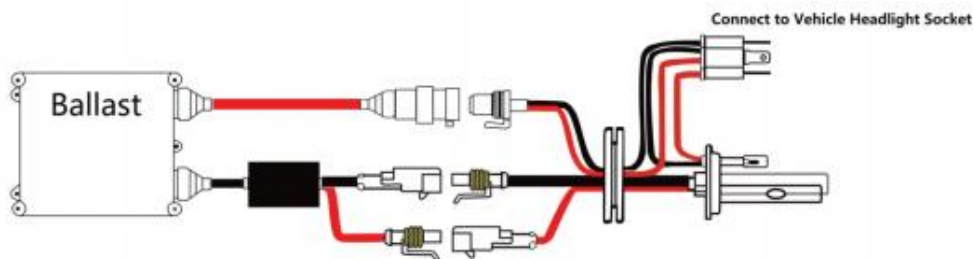

-END-